 


1. OVERVIEW BUTTON AND GUIDANCE SCREEN

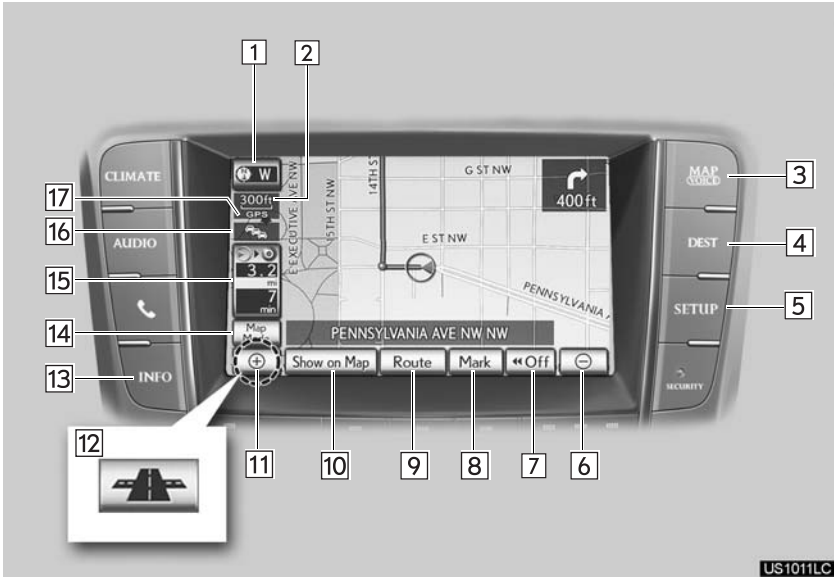

US1011LC

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates whether the map orientation is set to north-up or heading-up. Touching this symbol changes the map orientation. Both north-up and heading-up symbols display the vehicles direction as a letter (e.g. N for north).	45
2	Scale indicator	This figure indicates the map scale.	43
3	“MAP/VOICE” button	Press to repeat a voice guidance, cancel scrolling on the map screen, start guidance, and to display the current position.	35, 85, 87
4	“DEST” button	Press to display the “Destination” screen.	12, 14, 16, 17, 20, 62
5	“SETUP” button	Press to display the “Setup” screen.	22, 46, 56, 102, 117, 127, 165, 187, 280, 333
6	Zoom out button	Touch to reduce the map scale.	43
7	“<< Off”	Touch to obtain a broader view. Some of the buttons on the screen will not be displayed. They are displayed again by touching “On >>”.	123

No.	Name	Function	Page
8	"Mark"	Touch to register the current position or the cursor position as an address book entry.	37
9	"Route"	Touch to change the route.	91, 93
10	"Show on Map"	Touch to browse information about guidance route, to set the POI (Point of Interest) icons to be displayed on the screen, to record the route, etc.	98, 331, 357
11	Zoom in button	Touch to magnify the map scale.	43
12	Foot print map button	Touch to display the foot print map and the building information.	44
13	"INFO"	Press to display the "Information" screen.	24, 312, 317, 320, 323, 326, 330, 346, 358
14	"Map Mode"	Touch to display the "Map Mode" screen.	40
15	Distance and time to destination	Touch to display the distance, estimated travel and arrival time to the destination.	90
16	XM indicator	This mark is displayed when XM information is received.	329, 331
17	"GPS" mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	133

"PWR VOL" knob: Press and hold for 3 seconds or more to turn off the screen and restart the navigation system. Do this when the vehicle-mounted device response is extremely slow.

1. NAVIGATION OPERATION

2. REGISTERING HOME

- 1 Press the “DEST” button.



- 2 Touch “Go Home”.



If a home address has not been registered, it can be registered by touching “Go Home”.

 
- 3 Touch “Yes”.



- 4 There are 4 different methods to search your home. (See “DESTINATION SEARCH” on page 62.)




- 5 Touch “Enter”.

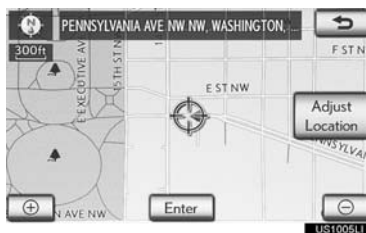

The “Edit Home” screen is displayed.

 6 Touch "OK".

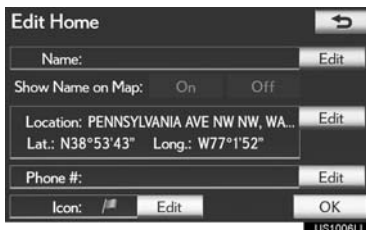

Registration of home is complete.

Home can also be registered by touching **"Navigation"** on the "Setup" screen. (See "REGISTERING HOME" on page 103.)

The name, location, phone number and icon can be changed. (See "EDITING HOME" on page 104.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 63.)

1. NAVIGATION OPERATION

3. REGISTERING PRESET DESTINATIONS

- 1 Press the “DEST” button.



- 2 Touch one of the preset destination buttons.



A preset destination can be set to any preset destination button that has not yet been set.

- 3 Touch “Yes”.



- 4 There are 4 different methods to search preset destinations. (See “DESTINATION SEARCH” on page 62.)




- 5 Touch “Enter”.



The “Edit Preset Destination” screen is displayed.

6 Touch "OK".

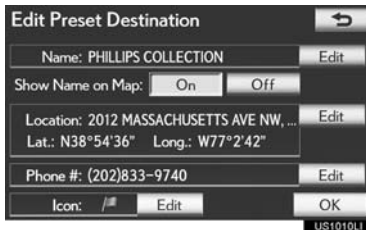

Registration of preset destinations is complete.

Preset destinations can also be registered by touching **"Navigation"** on the "Setup" screen. (See "REGISTERING PRESET DESTINATIONS" on page 105.)

The name, location, phone number and icon can be changed. (See "EDITING PRESET DESTINATIONS" on page 106.)

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 63.)

1. NAVIGATION OPERATION

4. OPERATION FLOW: GUIDING THE ROUTE

- 1 Press the “DEST” button.



- 2 There are 11 different methods to search destinations. (See “DESTINATION SEARCH” on page 62.)

► Page 1



► Page 2



- 3 Touch “Go to”.



The navigation system performs a search for the route.

- 4 Touch “OK”, and start driving.



Routes other than the one recommended can also be selected. (See “STARTING ROUTE GUIDANCE” on page 81.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

5. SETTING HOME AS THE DESTINATION

- 1 Press the “DEST” button.



- 2 Touch “Go Home”.



“Go Home” can be used if your home address has been registered. (To register home, see “REGISTERING HOME” on page 103.)

Your home address is set as the destination. The navigation system performs a search for the route.

- 3 Touch “OK”, and start driving.



Routes other than the one recommended can also be selected. (See “STARTING ROUTE GUIDANCE” on page 81.)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

1. NAVIGATION SYSTEM FUNCTION INDEX

► Map

Displaying maps	Page
Viewing the map screen	10
Displaying the current position	35
Viewing the current position vicinity map	36
Changing the scale	43
Changing the map orientation	45
Displaying Points of Interest	98
Displaying the estimated travel/arrival time to the destination	90
Selecting the map mode	40
Deleting map screen buttons	123
Displaying traffic information	330

Searching destinations	Page
Searching the destination	62
Changing the selected search area	62
Operating the map location of the selected destination	81

► Route guidance

Before starting route guidance	Page
Setting the destination	81
Viewing alternative routes	82
Starting route guidance	81

Before starting or during route guidance	Page
Viewing the route	81
Adding destinations	91
Changing the route	93
Displaying the estimated travel/arrival time to the destination	90

During route guidance	Page
Pausing route guidance	97
Adjusting route guidance volume	57
Deleting the destination	92
Displaying the entire route map	94

► Useful functions

Address book	Page
Registering address book entries	107
Marking icons on the map	109


Information	Page
Displaying vehicle maintenance	127

Hands-free system (for cellular phone)	Page
Initiating Bluetooth®	140
Making a call on a Bluetooth® phone	151
Receiving a call on the Bluetooth® phone	158

Voice command system	Page
Operating the system with your voice	298

1. “Destination” SCREEN

 The “Destination” screen enables a destination search. Press the “DEST” button to display the “Destination” screen.

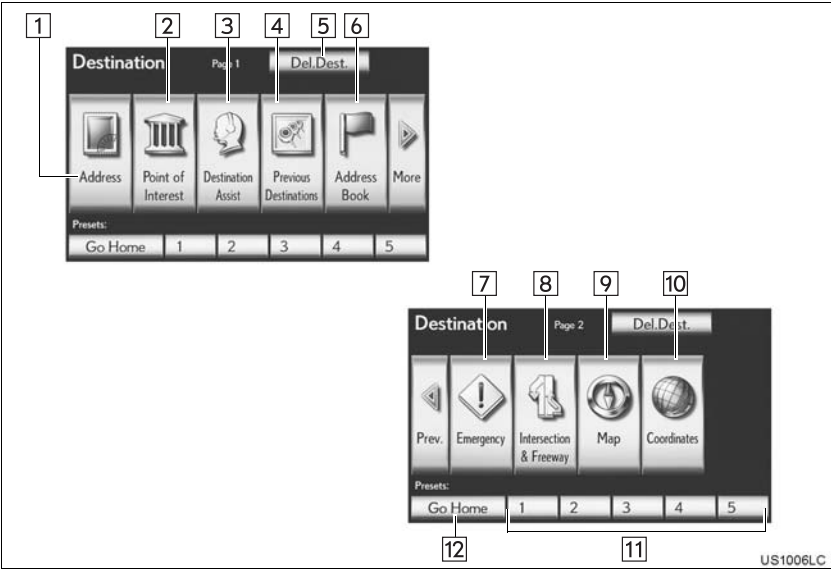


No.	Name	Function	Page
1	“Address”	Touch to input a house number and the street address using the input keys.	64
2	“Point of Interest”	Touch to select one of the POIs that have already been stored in the system’s database.	67, 355
3	“Destination Assist”	Touch to select to provide you with live assistance finding destinations via the Lexus Enform with Safety Connect response center.	74, 353
4	“Previous Destinations”	Touch to select a destination from any of the last 100 previously set destinations and from the previous starting point.	74
5	“Del.Dest.”	Touch to delete set destinations.	80

No.	Name	Function	Page
6	"Address Book"	Touch the desired location from a registered entry in "Address book". (To register address book entries, see "REGISTERING ADDRESS BOOK ENTRIES" on page 108.)	75
7	"Emergency"	Touch to select one of the 4 categories of emergency service points that have already been stored in the system's database.	75
8	"Intersection & Freeway"	Touch to enter the names of 2 intersecting streets or a freeway (interstate) entrance or exit. This is helpful if only the general vicinity, not the specific address, is known.	76
9	"Map"	Touch to enable setting a destination by specifying a location on the map screen.	79
10	"Coordinates"	Touch to enter latitude and longitude coordinates.	79
11	Preset destination buttons	Touch to select one of the 5 preset destination points as a destination. If a preset destination point has not been registered, a message will be displayed asking if it is desirable to set a destination to the preset screen button. (To register a preset destination, see "REGISTERING PRESET DESTINATIONS" on page 105.)	63
12	"Go Home"	Touch to select your personal home address without having to enter the address each time. If a home address has not been registered, a message will be displayed and the setting screen will automatically appear. (To register home, see "REGISTERING HOME" on page 103.)	63

2. "Setup" SCREEN

 The items shown on the "Setup" screen can be set. Press the "SETUP" button to display the "Setup" screen.

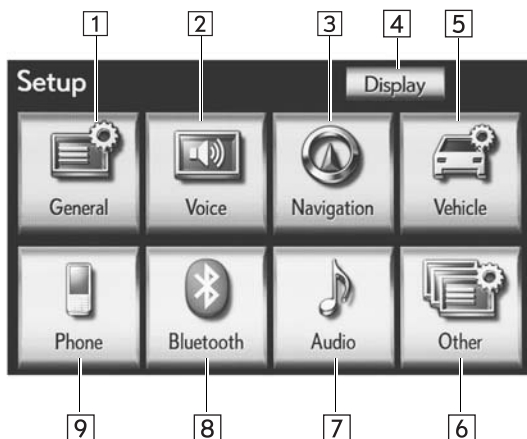


US1007LG

No.	Name	Function	Page
1	"General"	Touch to change the selected language, operation sound, automatic screen change settings, etc.	46
2	"Voice"	Touch to set the voice guidance settings.	56
3	"Navigation"	Touch to set home, preset destinations, address book, areas to avoid, etc. or to delete previous destinations.	102
4	"Display"	Touch to adjust the contrast and brightness of the screens, turn the display off, etc.	33
5	"Vehicle"	Touch to set vehicle information such as maintenance information.	127
6	"Other"	Touch to set Lexus Insider, XM Sports, XM Stocks and XM Fuel Prices.	333, 361
7	"Audio"	Touch to set HD Radio™ channel and iPod settings.	280
8	"Bluetooth**"	Touch to set Bluetooth® phones and Bluetooth® audio devices.	187
9	"Phone"	Touch to set the phone sound, phonebook, message settings, etc.	165

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3. "Information" SCREEN

 This screen can be used to display the XM satellite system, Lexus Enform, etc. Press the "INFO" button to display the "Information" screen.

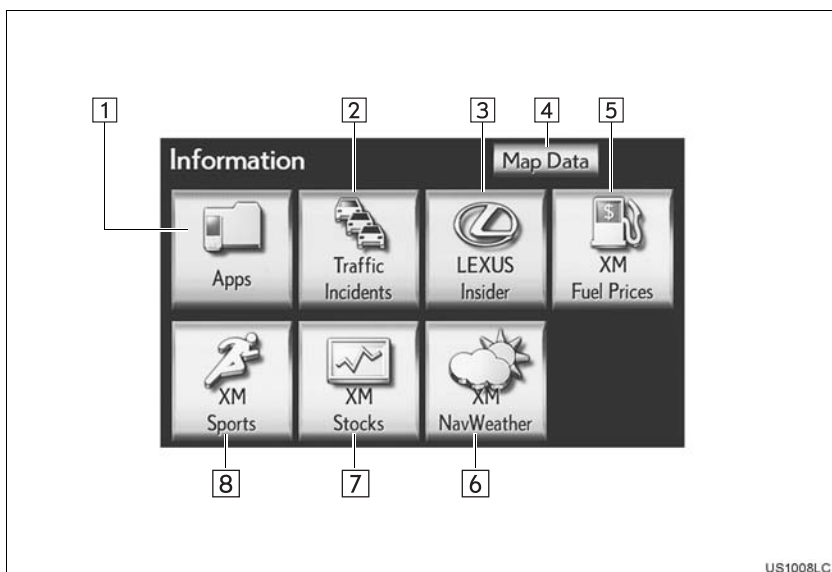

No.	Name	Function	Page
1	"Apps"	Touch to display the "Apps" screen.	346, 349
2	"Traffic Incidents"	Touch to display traffic incidents.	330
3	"LEXUS Insider"	Touch to display the "LEXUS Insider" screen.	358
4	"Map Data"	Touch to display map data information.	312
5	"XM Fuel Prices"	Touch to display current fuel prices and gas station locations information.	323
6	"XM NavWeather"	Touch to display weather information.	326
7	"XM Stocks"	Touch to display personally selected stocks information.	320
8	"XM Sports"	Touch to display personally selected sports teams information.	317

